

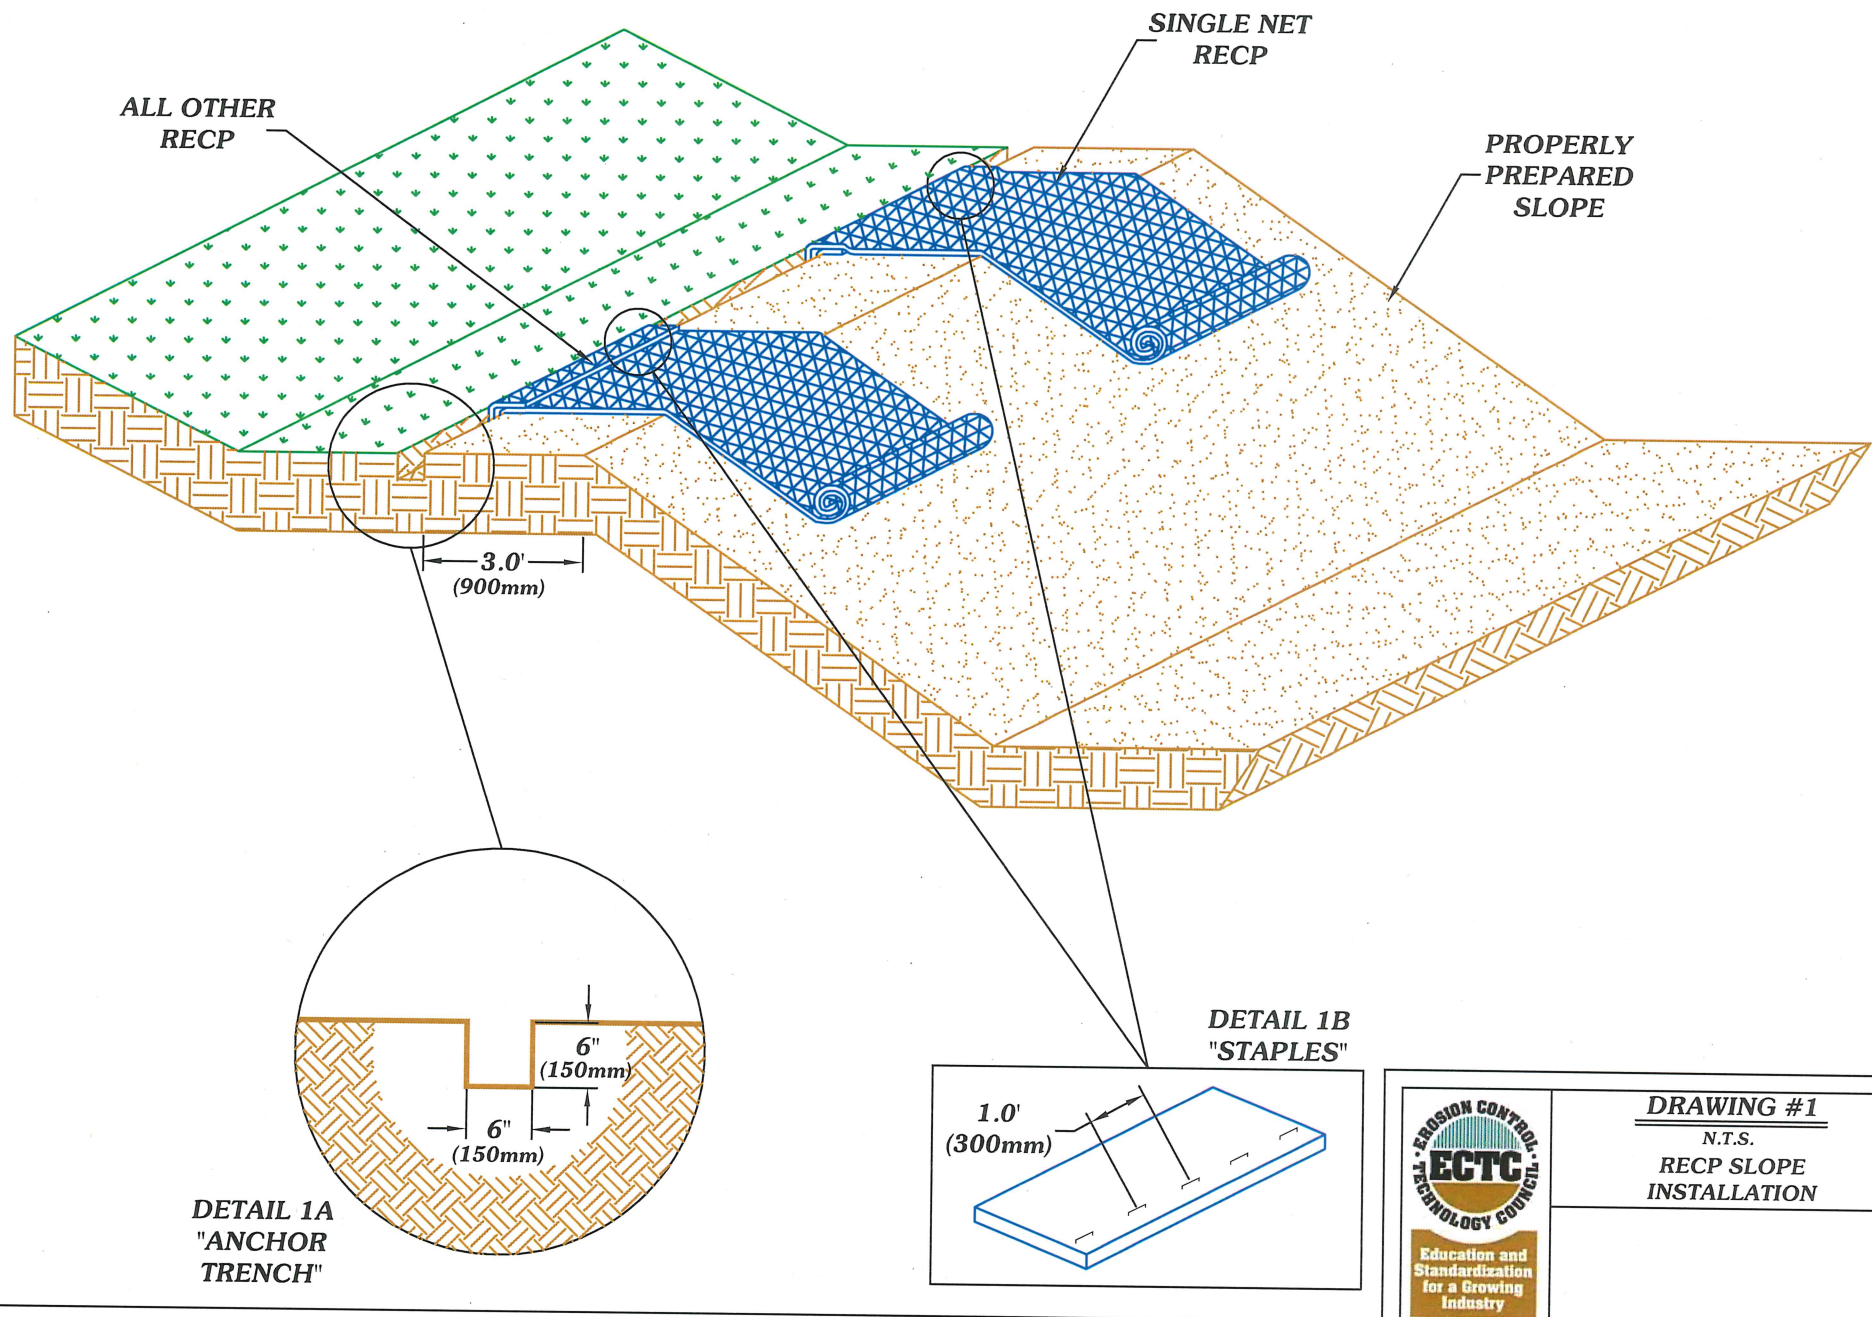


***NOTE:**

Install the RECPs 3ft. (900mm) beyond the shoulders of the slope onto flat final grade. Secure roll end with a single row of staples on 1 ft. (300mm) centers.

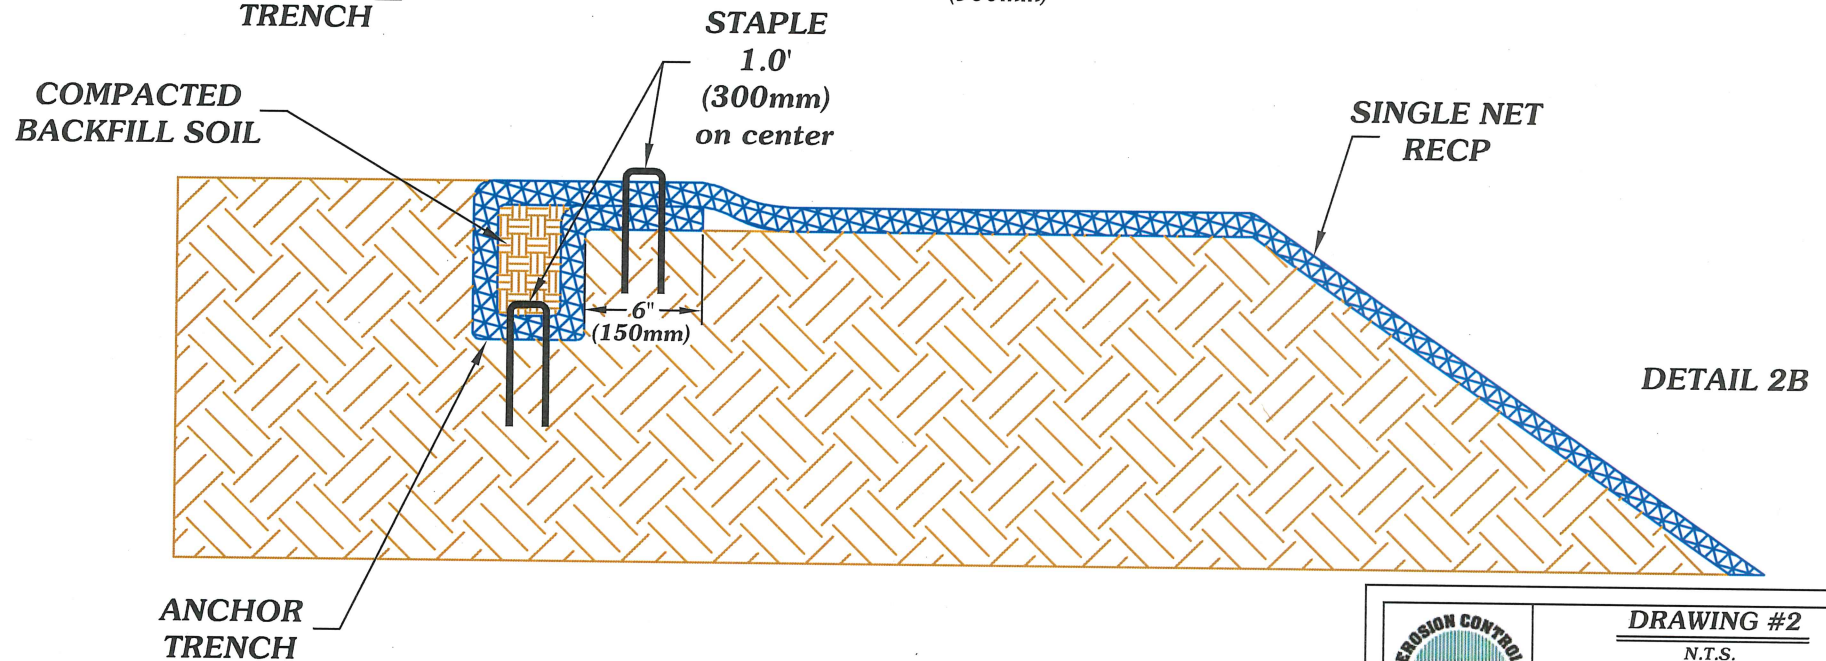




***NOTE:**
Netting to be on top of blanket.

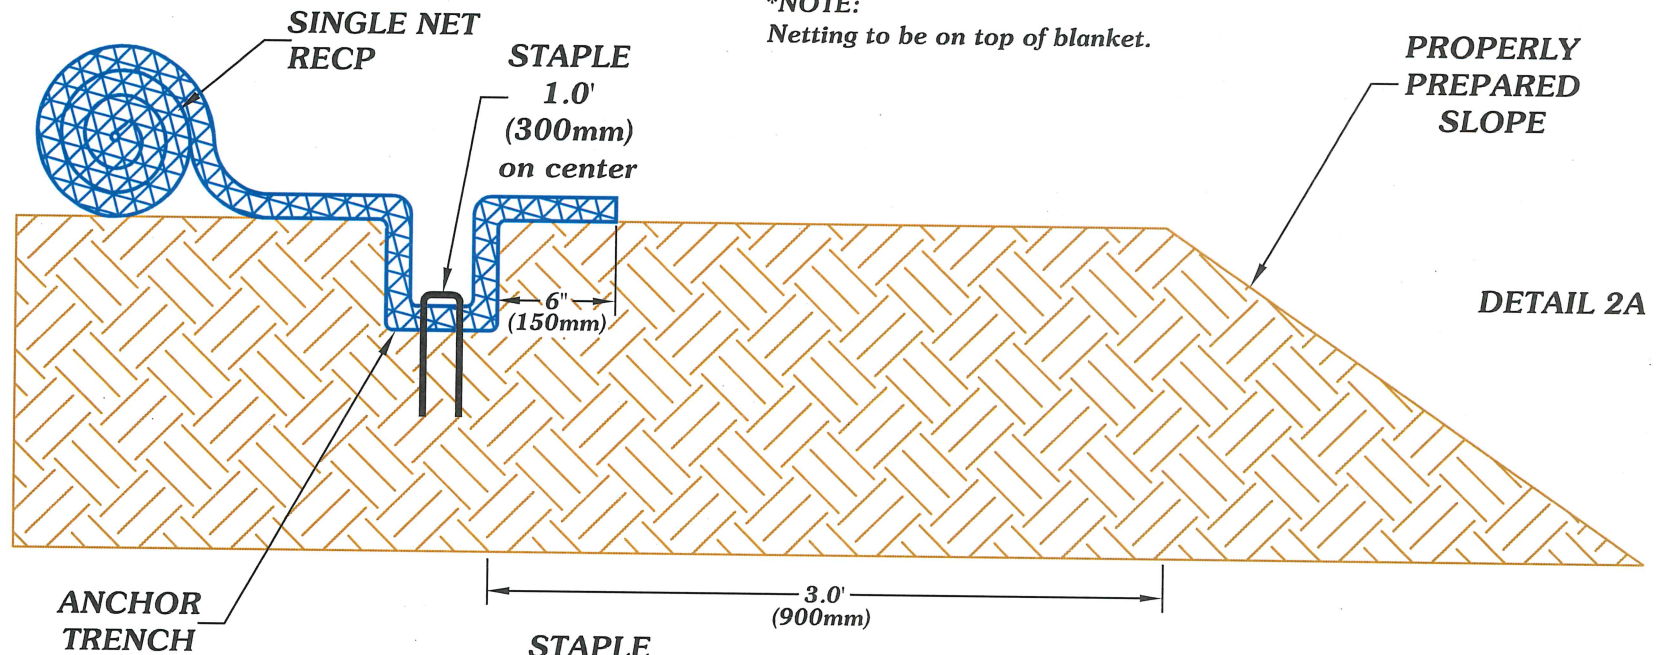

DRAWING #2


N.T.S.

**RECP SLOPE
INSTALLATION**

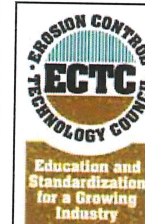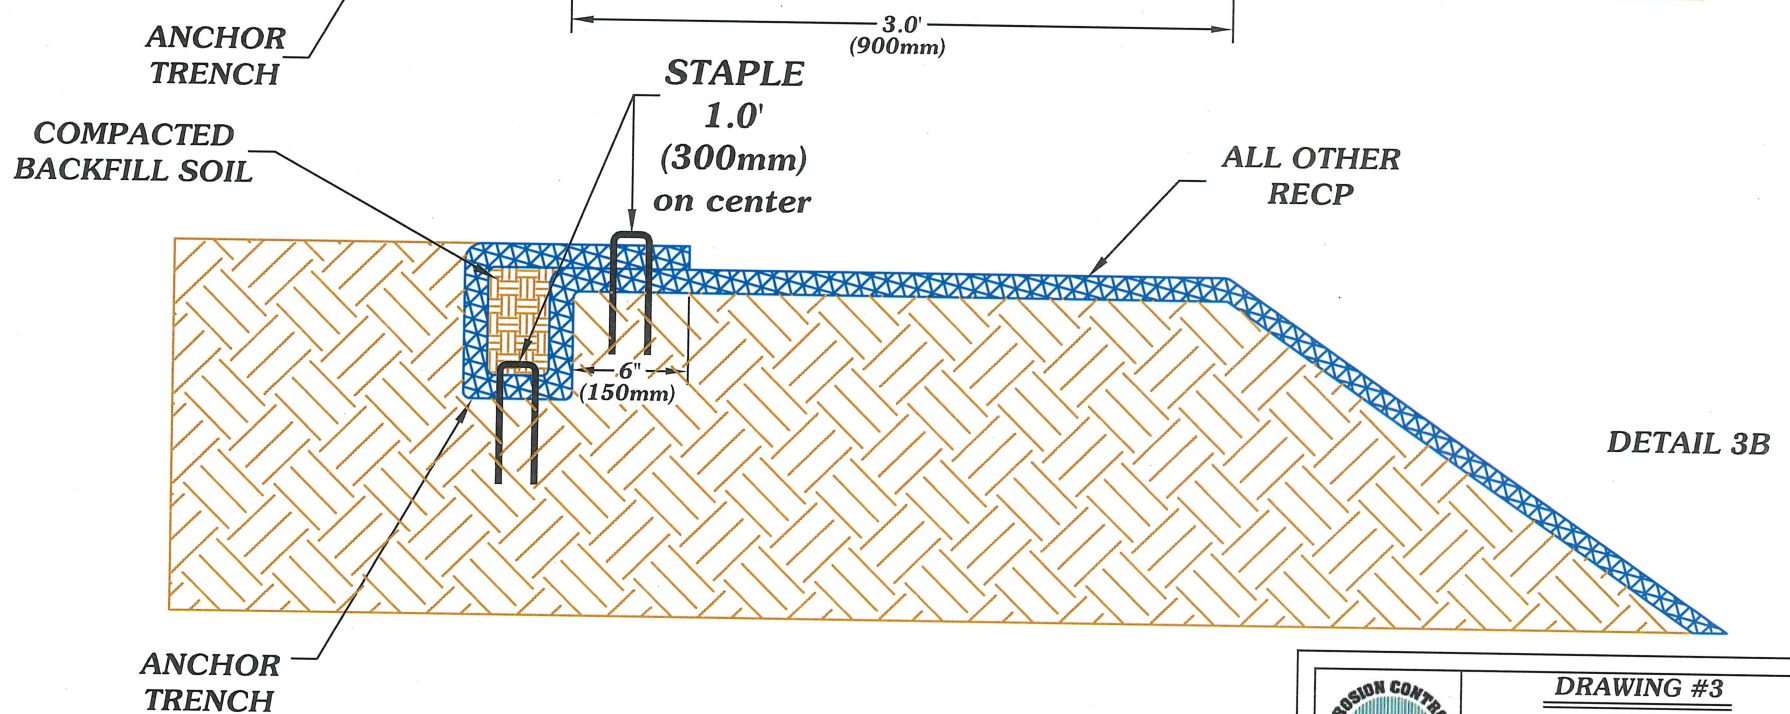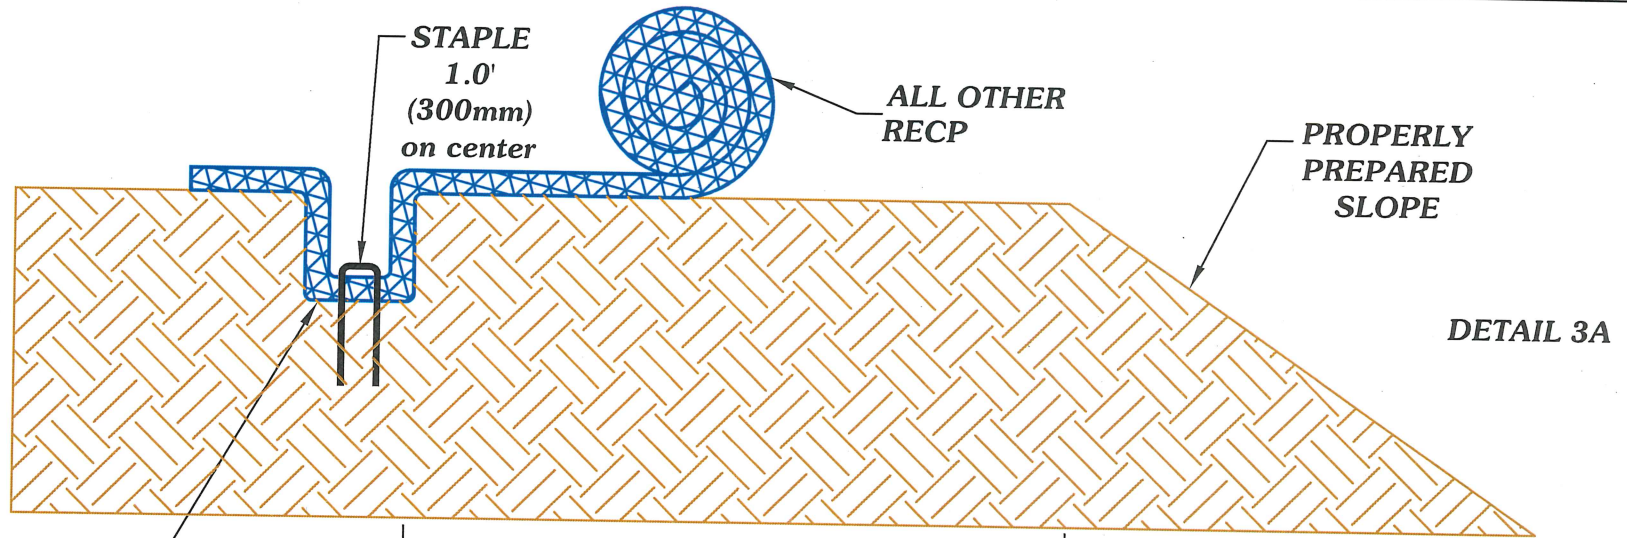


DRAWING #3
N.T.S.
**RECP SLOPE
INSTALLATION**

***NOTE:**
Use manufacturer's recommended staple pattern.

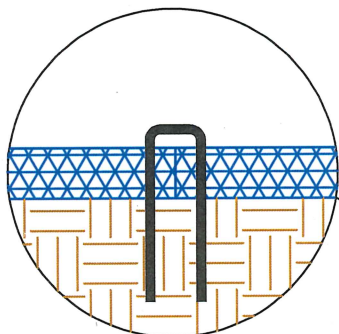


DETAIL 4A
"ABUTTED"

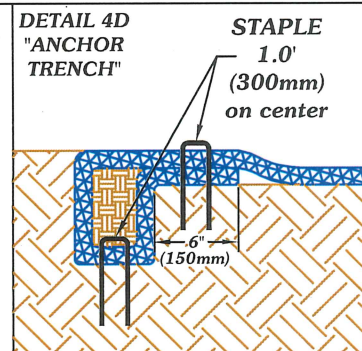


DETAIL 4D
"ANCHOR TRENCH"

STAPLE
1.0'
(300mm)
on center

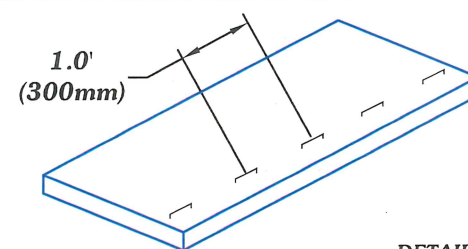


DETAIL 4E

SINGLE NET
RECP

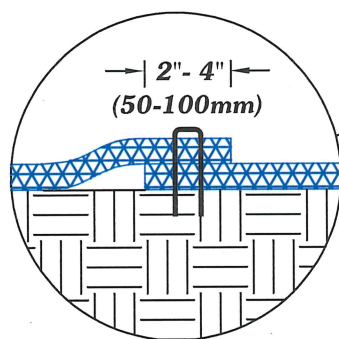


DETAIL 4B
"OVERLAP"

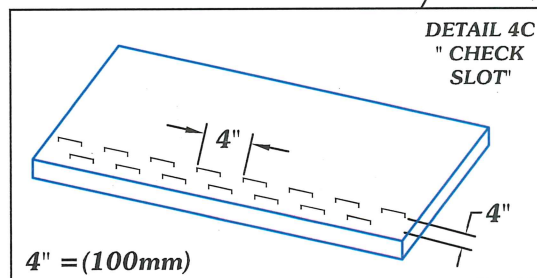

DETAIL 4C
"CHECK
SLOT"







4" = (100mm)

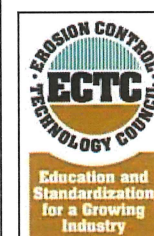

DRAWING #4


N.T.S.

**SINGLE NET
INSTALLATION**

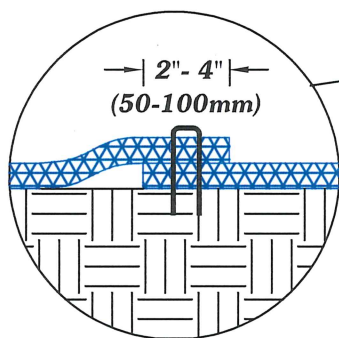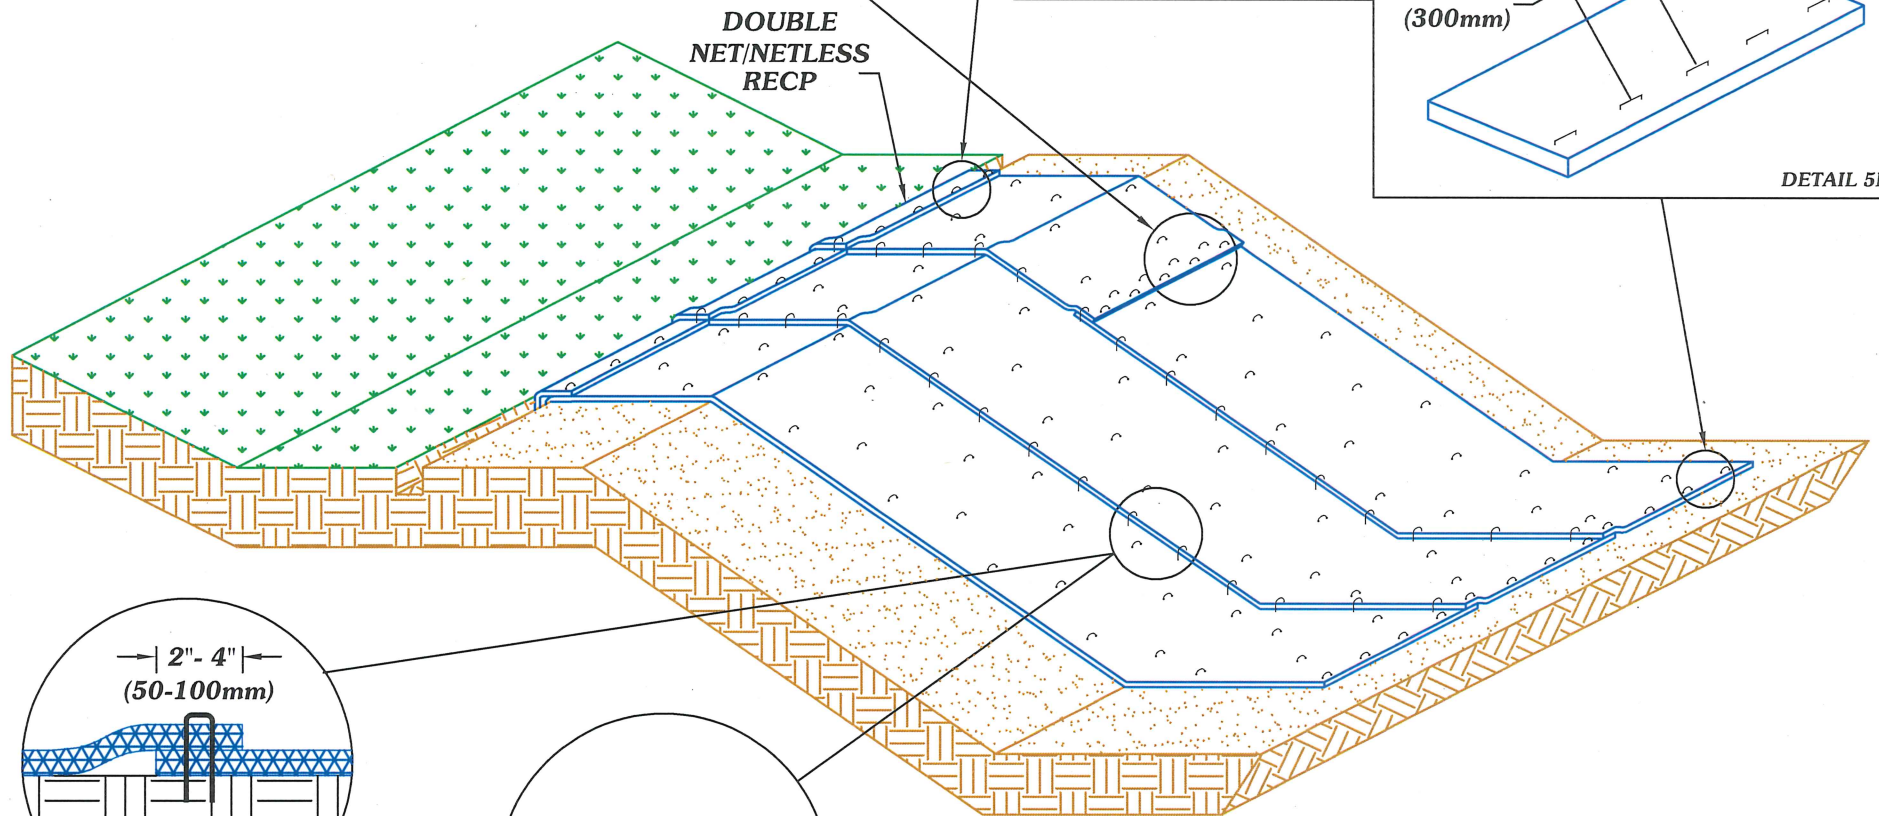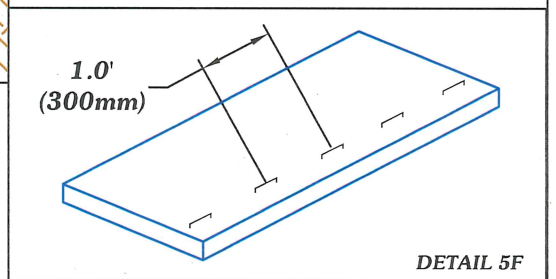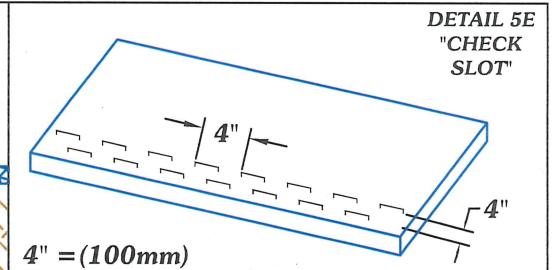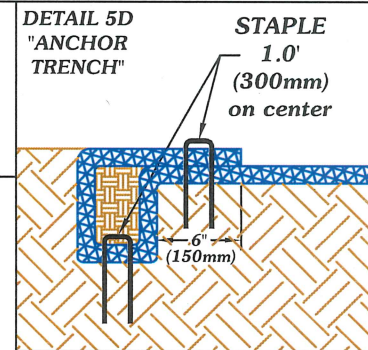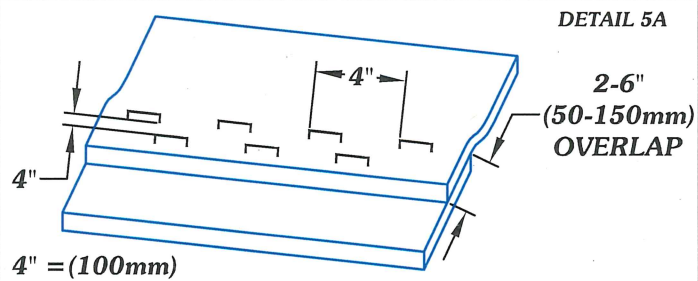


DETAIL 5B
"OVERLAP"

OR

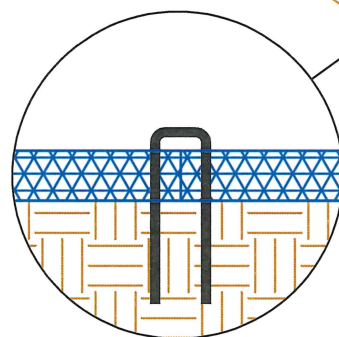

DETAIL 5C
"ABUTTED"

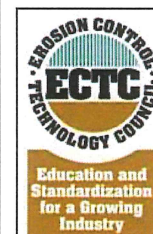

DRAWING #5
N.T.S.
**DOUBLE NET/NETLESS
INSTALLATION**